SHOWN BELOW IS HOW TO ROUTE THE TUBING IN THE SURFACE BOX SO THAT THE COVER PLATE WILL FIT BACK CORRECTLY. OVERLEAF IS THE TEMPLATE TO TRIM THE TUBING TO THE 90.0 mm REQUIRED.

IMPORTANT! READ THIS NOTICE BEFORE FITTING.

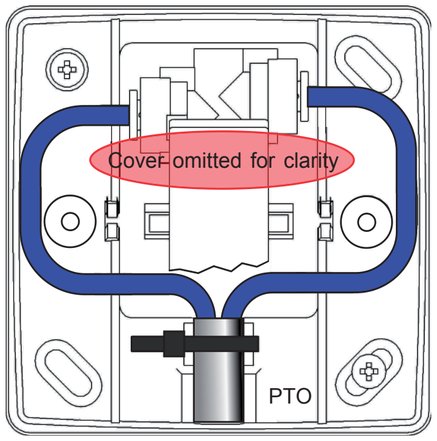

SHOWN BELOW IS HOW TO ROUTE THE TUBING IN THE SURFACE BOX SO THAT THE COVER PLATE WILL FIT BACK CORRECTLY. OVERLEAF IS THE TEMPLATE TO TRIM THE TUBING TO THE 90.0 mm REQUIRED.

IMPORTANT! READ THIS NOTICE BEFORE FITTING.

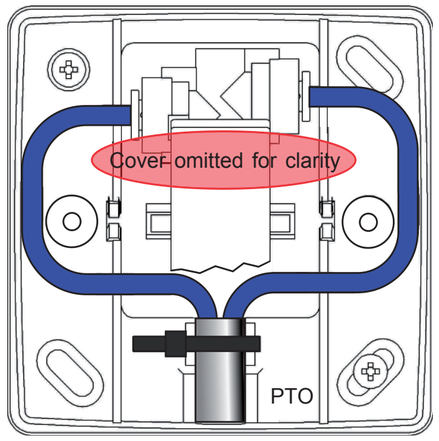

Important!
Both ends of the tubing are pre cut to the length shown. If you shorten the tube please carefully remove the sheathing from the tubing as shown

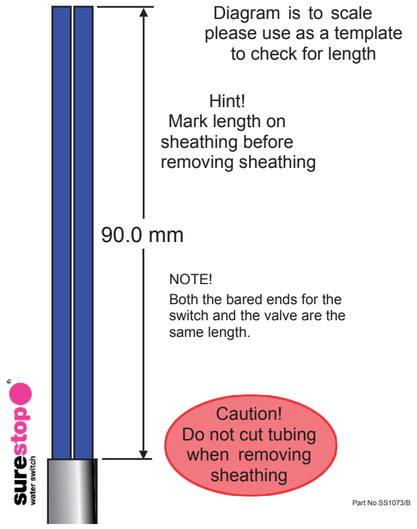

Part No SS1073/B

Important!
Both ends of the tubing are pre cut to the length shown. If you shorten the tube please carefully remove the sheathing from the tubing as shown

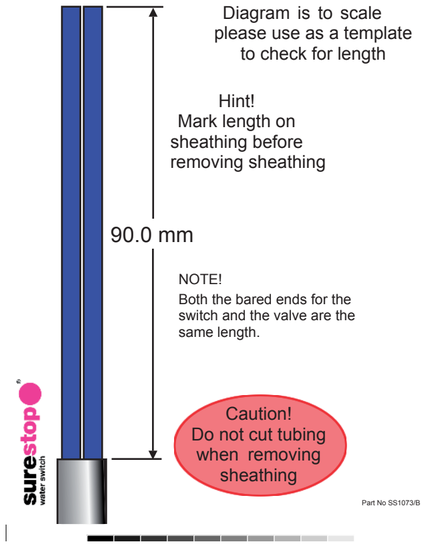

Part No SS1073/B

CYAN MAGENTA YELLOW BLACK